

<b>stacosystems</b> One Step Ahead	PHONE: (714) 549-3041		NAME	DATE
	FAX: (714) 549-0930	ORIGINATOR	T.N.	4/15/09
		APPROVED		
© Copyright StacoSystems Inc., 2009	CAGE CODE: <b>12522</b>			

# TECHNICAL BULLETIN – TB-168

**SERIES M711/0004**

**PC-COMPATIBLE KEYBOARDS**  
**Panel Mount**  
**Wide Panel Cutout Instructions**

**T  
B  
1  
6  
8**

The Information and design disclosed herein was originated by and is the property of STACOSWITCH, INC. STACOSYSTEMS, INC. reserves all patent, proprietary, design, manufacturing, reproduction, use and sale rights thereto, and to any article disclosed therein, except to the extent rights are expressly granted to others. The foregoing does not apply to vendor proprietary parts.

**TB-168**

SHEET 1 OF 3



**Wide Panel Cutout Instructions  
M711/0004**

1. Cut the panel to the recommended dimensions shown in Figure 1. Check that the depth of the cutout below the keyboard is greater than 9.5mm.

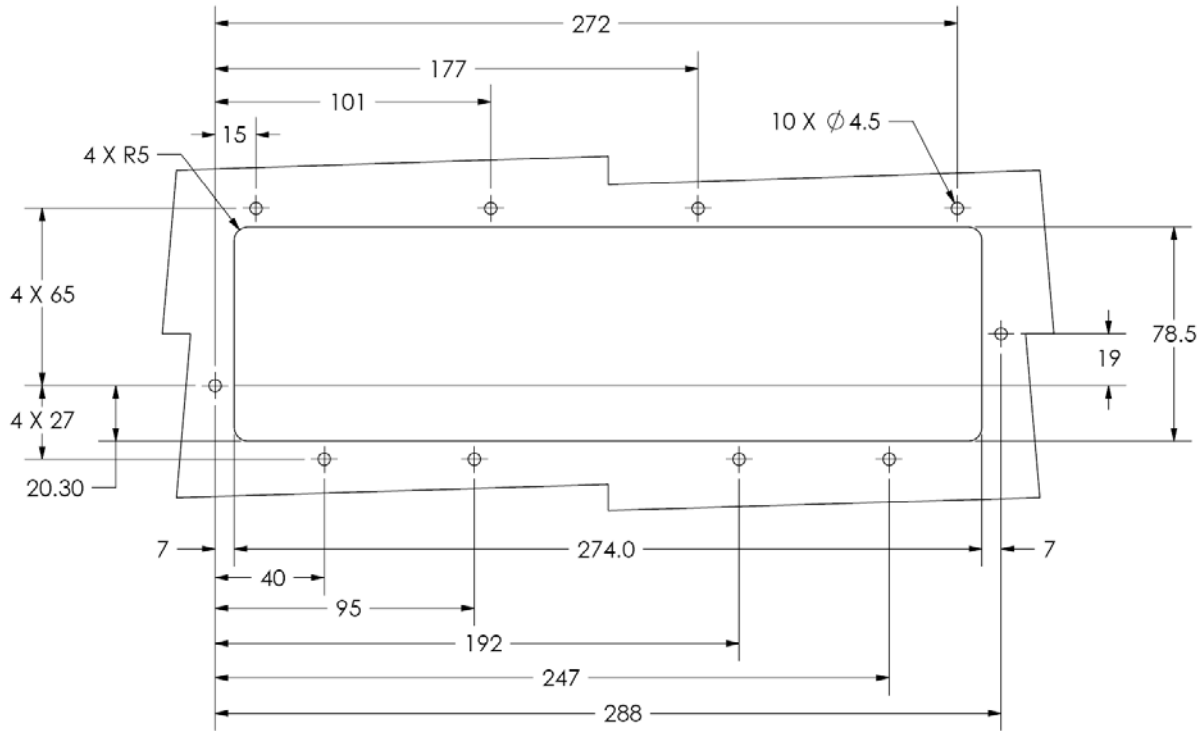


Figure 1.  
WIDE PANEL CUTOUT RECOMMENDATIONS  
DIMENSIONS ARE IN MILLIMETERS

CAGE CODE:	DRAWING NO.	REV.	SHT.
<b>12522</b>	<b>TB-168</b>	1.0	3